



If you are installing the device for the first time, please read this manual in advance and configure it step by step. Reboot the device once you finish the configuration is required, including change the network environments, account number and so on. If you need more info, please go to our website ([www.flyingvoice.com](http://www.flyingvoice.com)) and download the user manual.

## 1 Packaging list

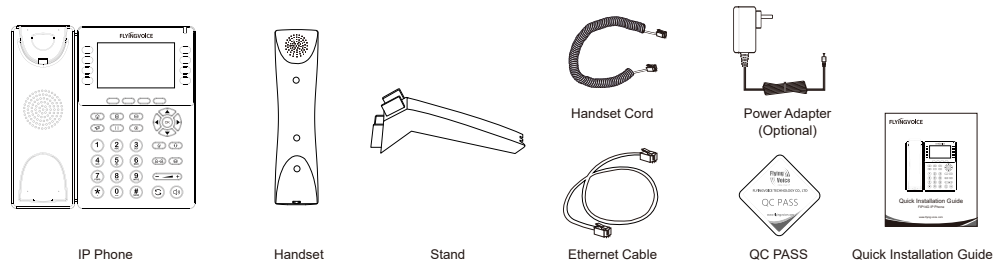


## 2 Assembling the phone

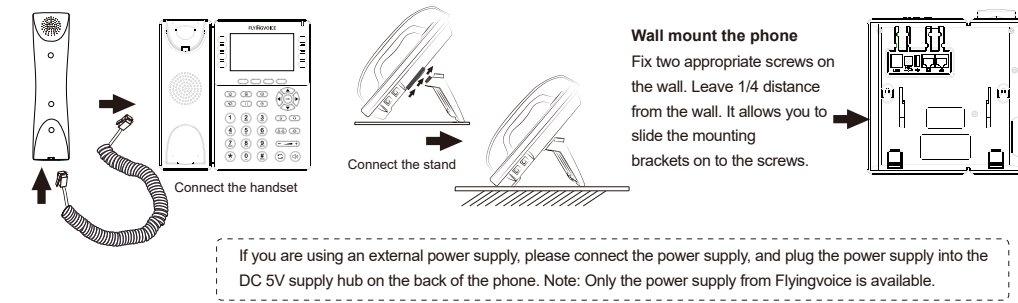

## 3 Starting the phone

After the phone is connected the power supply, it will start the initialization process automatically. After that, the LCD will display "Flyingvoice" logo and the phone will be ready to use.

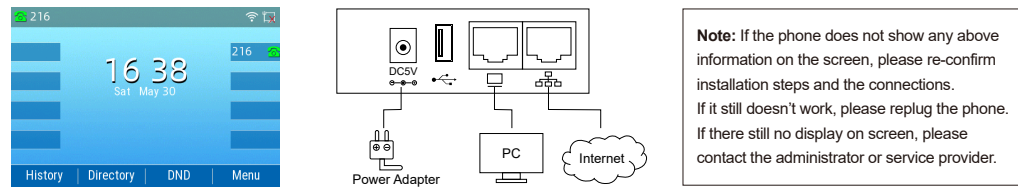

## 4 Configuring your phone

### 4.1 Network Settings

There are two ways to configure the network settings.

**DHCP:** By default, the phone attempts to contact a DHCP server in your network to obtain its valid network settings. e.g., IP address, subnet mask, gateway address and DNS address.

**Static IP Address:** If the phone can't connect with DHCP server, please configure IP address, subnet mask, gateway address, primary DNS address and secondary DNS address manually.

### 4.2 Accessing the web management

**Step1.** Connect the phone to the Internet via the Internet port of the phone, connect your PC to the PC port of the phone with Ethernet cable.

**Step2.** Open web browser on your computer, enter the IP address (find the IP address by pressing Menu > My Status) into the address bar, and then press Enter key.

**Step3.** Enter the username (Default: admin) and password (Default: admin) in the login page and click Confirm.

### 4.3 Connect via wired network

**Step1.** Power on the phone.

**Step2.** Connect the Internet port of phone to the available network adapters (switches or routers) with Ethernet cable.

**Step3.** If there is DHCP server in network, you can find the IP address by pressing Menu > My Status.

### 4.4 Connect via Wi-Fi

**Step1.** Press **☰** button, then choose Basic Settings > Wi-Fi via **▲** or **▼** button.

**Step2.** Choose "Available Network".

**Step3.** Use **▲** or **▼** button to select the network and press soft key "Con" to connect with it. Input the password if Wi-Fi authentication is required.

**Note:** If AP is connected, **📶** will appear in the status bar on the main interface.

## 5 Registering your phone

Input the device's IP address in the address bar of the browser. Then you can login SIP Account configure of the phone. Choose Enable on Line Enable, input SIP Account parameters.


### Configure information

Basic Setup			
Line Enable	<input type="button" value="Enable"/>	Outgoing Call without Registration	<input type="button" value="Disable"/>
Sync Clock Time	<input type="button" value="Disable"/>		
Proxy and Registration			
Proxy Server	<input type="text" value="192.168.1.1"/>	Proxy Port	<input type="text" value="5060"/>
Outbound Server	<input type="text"/>	Outbound Port	<input type="text" value="5060"/>
Backup Outbound Server	<input type="text"/>	Backup Outbound Port	<input type="text" value="5060"/>
Allow DHCP Option 120 to Override SIP Server	<input type="button" value="Disable"/>		
Subscriber Information			
Display Name	<input type="text" value="621"/>	Phone Number	<input type="text" value="621"/>
Account	<input type="text" value="621"/>	Password	<input type="password" value="*****"/>

### SIP Account Parameters

Name	Description	Name	Description
Enable Line	Enable Line or not	Display Name	The number displayed in callee
Proxy Server	Domain name or IP address of SIP server	Phone Number	Number of telephone provided by SIP proxy
Outbound Proxy	Outbound proxy IP or domain name	Account	SIP account provided by SIP proxy
Outbound Port	Service port of outbound proxy	Password	SIP password provided by SIP proxy
Proxy Port	The port which SIP server supports of VoIP service. (Default: 5060)		

# FLYINGVOICE

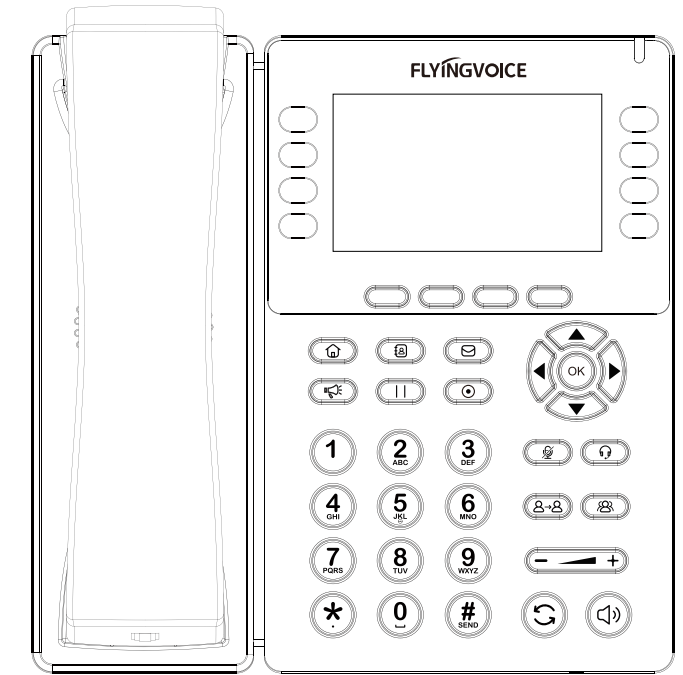

# Quick Installation Guide

## FIP14G IP Phone

[www.flyingvoice.com](http://www.flyingvoice.com)